

PGM Ladies Full-Body Dress Form Installation Guide

Please check the following items in your package



Step 1
Place BASE firmly on the ground.



Step 2
Insert INNER POLE into the BASE.




(2) Then twist the
eye-bol very tightly
after INNERPOLE is inserted into
the BASE completely. Please use
a screw driver or any other tool to
insert through righ of eye-bolt, then
turn it as hard as you can.
Human hands won't do it.





Step 3

Gently slide in the SPRING to the INNER POLE.

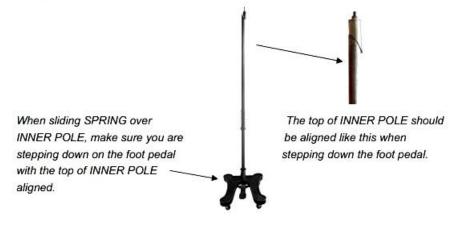

Step 4

Slide OUTER POLE over INNER POLE.



When sliding OUTER POLE over INNER POLE, make sure you are stepping down on the foot pedal with the top of INNER POLE aligned.

Step 5

Tips

Twist the PENDANT into the DRESS FORM, along with TOPPER.

Step 6

Hang the DRESS FORM to the OUTER POLE. Twist the screw tightly.

Congratulations!! Installation Complete.



This area - Please tighten it but not too tight, to allow

- To adjust the height, step on the pedal, lift it to your desire height. dress form to hang at a natural center of gravity
- To Collapse the shoulder, push both shoulder in at the same time, to release shoulder push it again!
- > To lock the height at a desired position, there's a safety lock on the outer pole to disable pedal, simply tighten it when necessary!
- > This stretcher allow you to lengthen or tighten the dress form, please always secure it!
- This waterfall arm allow you to hang pattern making materials, measuring tapes..etc



Any question, please call us at toll free 1-888-818-1991 or email us at info@pgmdressform.com

THANK YOU VERY MUCH!



Stretcher